

 
**DIRECTPAGE**

**www.DirectPage.com**

**DIRECTPAGE**

**DIVA** e-pager

USER'S MANUAL

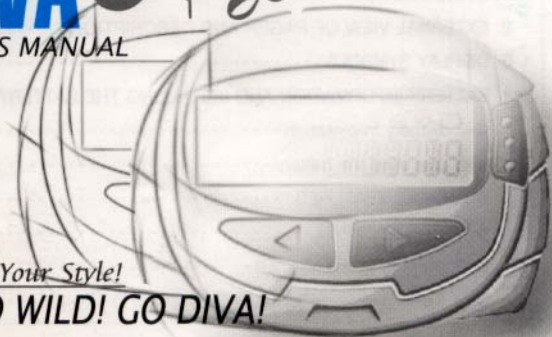

Show Your Style!

**GO WILD! GO DIVA!**

1. INTRODUCTION .....	4
2. EXTERNAL VIEW OF PAGER AND DESCRIPTIONS .....	5
3. DISPLAY SYMBOLS .....	6
4. BATTERY INFORMATION AND INSTALLING THE BATTERY ..	7
4-1 Battery information .....	7
4-2 Installing the battery .....	7
5. STANDARD FEATURES .....	8
5-1 Stand by mode .....	8
5-2 Turning your pager off .....	8
5-3 Turning your pager on .....	9

5-4 Receiving and reading your messages .....	9
5-5 Deleting message from memory .....	10
5-6 Setting the alerts .....	12
5-7 Setting time .....	14
5-8 Setting alarm .....	14
5-9 Auto light .....	16
5-10 Canned messages .....	16
6. CONVENIENT FEATURES .....	18
6-1 To change your audible alert to silent mode .....	18
6-2 Stop watch .....	18
7. CARE OF YOUR PAGER AND CLEANING OF YOUR PAGER ..	19

7-1	Care of your pager .....	19
7-2	Cleaning your pager .....	19
8.	REPAIR AND MAINTENANCE .....	20
9.	LIMITED WARRANTY .....	20
9-1	What products may be covered by this warranty? .....	20
9-2	What does this warranty cover? .....	21
9-3	How long does the coverage last? .....	21
9-4	What will DirectPage do if the product becomes defective in materials or workmanship during the warranty period? .....	22
9-5	What is not covered by this warranty? .....	23
9-6	How do you get warranty service? .....	24

 
### 1. Introduction

Congratulations and Thank you for choosing the E-pager. It is reliable, compact, and designed for easy operation.

These operating instructions explain how to use your pager and provide helpful suggestions for first time and experienced users. Please spend a few minutes learning all of the functions and messaging capabilities of your pager.



## 2. External view of Pager and descriptions [www.DirectPage.com](http://www.DirectPage.com)

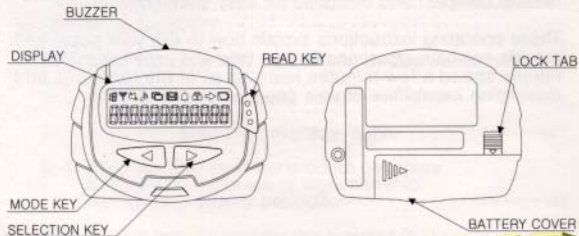

**DIRECTPAGE**

5

## 3. Display Symbols

1. !8 Unread message counter
2. ∇ Service area indicator
3. ◀ Set audible alert
4. ▶ Set vibration alert
5. ♪ Set melody alert
6. ☐ Duplicate message indicator
7. ✉ New message indicator
8. ⚙ Set time alarm
9. 🔒 Lock message indicator
10. ➔ Message continued indicator
11. 🔋 Low battery indicator

[www.DirectPage.com](http://www.DirectPage.com) 6

 
 
#### 4. Battery information and installing the battery.

##### 4-1 Battery Information

The E-Pager is designed to operate with a single AAA size alkaline battery.


##### 4-2 Installing the battery

- ① Push the lock tab upward to unlock the battery door.
- ② Slide the battery door out.
- ③ Remove consumed battery.
- ④ Insert the battery, aligning the polarity markings. ("+" And "-")

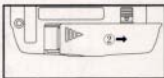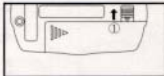

[www.DirectPage.com](http://www.DirectPage.com)

 
- ⑤ Slide the door to completely closed position, and push the lock tab downward to lock the battery door.

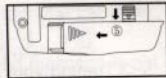

#### 5. Standard Features

##### 5-1 Stand by Mode.

 
When a battery is inserted.

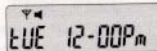

# DIRECTPAGE


##### 5-2 Turning your pager OFF.

Press right button (▶) for 2 seconds until OFF and current time are shown on the display.

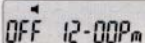

OFF 12-00Pm

5-3 Turning your pager ON.  
Press right button(▶) instantly to bring the pager back to stand by mode.

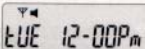

LUE 12-00Pm


5-4 Receiving and Reading your messages.  
When a message is received, your pager alerts and display received message.

- ① Press read button(⋮) to stop the alert.
- ② Press read button to read the time it was received.
- ③ Press read button to read the received message.

# DIRECTPAGE


The pager automatically stores the messages and the time and date it is received.

"NEW PAGE" is displayed when the received message is not read until the alerting is terminated.

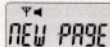

NEW PAGE

"PAGE FULL" is displayed when the number of messages received is more than the available memory slots (20).

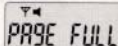

PAGE FULL

 
When "PAGE FULL" is displayed, the oldest, and the unprotected message will be replaced by a new message.

5-5 Deleting Messages from memory  
You can delete an unlocked message from memory while you are viewing the message or through the function menu.




To delete messages while viewing the message.

- ① "DELETE?" is displayed when Press left button (◀) while message you want to delete is displayed.
- ② Press right button (▶) to delete the displayed message.

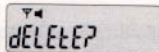

To delete locked messages.

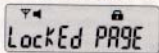 

- ① Press right button (▶) to unlock while a locked message you want to delete is displayed.
- ② Press left button (◀) then right button (▶) to delete the message.

**DIRECTPAGE**

To delete all received messages

- ① "DELETE ALL" is displayed when Press left button (◀) three times from the stand by mode.
- ② "DELETE?" is displayed to confirm the deletion when press right button (▶).
- ③ All messages will be deleted when press right button (▶) again otherwise press read button (⋮) to cancel deletion process.

5-6 Setting the alerts

- ① "ALERT" is displayed when Press left button (◀) once from the stand by mode.
- ② Press right button (▶) then press left button (◀) to scroll following alerts.

a)"TONE"

▼◀  
TONE

5 different tones

b)"MELODY"

▼◀  
MELODY

8 different melodies

c)"MOTOR"

▼◀  
Motor

vibration

d)"SILENT"

▼◀  
SILENT

no alert

- ③ Press right button(▶)to set motor and silent alert. or
- ④ Press right button(▶)to set either "TONE" or "MELODY" alert.
- ⑤ Press left button(◀)to hear choices of the tone or melody alert.
- ⑥ Press right button(▶)to set desired "TONE" or "MELODY" alert while chosen alert is playing.

**DIRECTPAGE**

### 5-7 Setting Time

- ① "SET TIME" is displayed when Press left button(◀)twice from the stand by mode.

▼◀  
SET-TIME

- ② Press right button(▶).
- ③ Press left button(◀)to set year, month, date, and time.
- ④ Press right button(▶)to move the cursor from year to month, day and time.

### 5-8 Setting Alarm

- ① "ALARM" is displayed when Press left button(◀)four times from the stand by mode.



# DIRECTPAGE

ALArM

- Press right button(▶) to set alarm.
  - Press left button(◀) to choose "ON".
- On
- Press right button(▶) to confirm the alarm time you previously set. If you want to change the alarm time.
  - Hold right button(▶) for 2 seconds until hour digits flash
  - Press left button(◀) to set hour press left button to move Cursor to minute until specific time your desire is set.

\*●\* will be displayed defines alarm status.  
At the selected time, your pager sounds a 60 seconds audible alert even if pager is in the silent and vibration mode.  
Press read button(⋮) to disable the alarm.

## 5-9 Auto light

Pager has programmed to turn the light on automatically during the hours of 7:00pm through 7:00am.

However between 7:00am to 7:00pm, light is not going to turn on automatically so that if you need the light press the function button to turn the light on manually.

## 5-10 Canned messages:

E-pagers have special feature to send the pre-programmed 14 alpha messages.

Following are the alpha messages and their code corresponding codes.


## Canned Message & Code Table


CANNED MESSAGE	CODE
CALL HOME	** 111
CALL OFFICE	** 112
HAPPY B-DAY	** 513
GROCERY	** 700
PICK UP	** 420
HOME WORK	** 440
DONE	** 400
EMERGENCY	** 911
COME SOON	** 747
I LOVE YOU	** 143
I MISS YOU	** 430
DINNERS ON	** 720
RUNNING LATE	** 740
WAIT FOR ME	** 430

# DIRECTPAGE


## 6. Convenient Features


### 6-1 To change your audible alert to silent mode.

Press left button(  ) for 2 seconds to change any alert to silent mode.


Press left button(  ) for 2 seconds to switch back from silent alert to your preselected alert.


### 6-2 Stop Watch

- ① "Stop watch" is displayed when Press left button(  ) five times from the stand by mode.

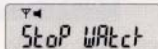

STOP WATCH

- ② Press right button(  ) to have stop watch ready screen.

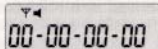

00-00-00-00

- ③ Press right button(▶)to start the watch.
- ④ Press right button(▶)to stop the watch.
- ⑤ Press left button(◀)to reset the stop watch.

## 7. Care of your pager and cleaning of your pager

### 7-1 Care of your pager

To maintain the fine optical quality of the display in the pager, do not subjected it to extreme temperatures and moisture.

### 7-2 Cleaning your pager

To clean smudges and grime from the exterior of the housing, use a soft, Nonabrasive cloth moistened in a mild soap and water solution. Rinse the surface using a second cloth moistened in clean water.

**DIRECTPAGE**

Do not immerse the pager in water. Do not use any other cleaning solutions.

## 8. Repair and maintenance

Your pager, properly handled, is capable of many years of trouble free service. However, if your pager ever requires service, Diva Telecom.,Inc. staffed with specially trained technicians, offers repair and maintenance facility.

Please contact your paging service representative or a Diva Telecom. sales office for more information.

## 9. Limited Warranty

### 9-1 What products may be covered by this warranty?

The following products ("the products" or the "product") purchased through a Diva Telecom Co.,Ltd("Diva"), Diva authorized dealer (the dealer) may be covered by this warranty.

**9-2 What does this warranty cover?**

Diva warrants to the original end-user purchaser of the products ("You") that the products will conform to the applicable published specifications in effect at the time of shipment from Diva to the dealer, and that the products will be free from defects in materials or workmanship under normal use and service during the warranty period.

**9-3 How long does the coverage last ?**

The warranty period will begin on the date you purchased the Product. Dated proof of purchase (e.g. cash register receipt) is to accompany any product returned for warranty service.

However, if proof of purchase is not available, the warranty period begins on the product is shipped from Diva to the dealer. The warranty periods for the products, excluding any battery cell or assembly, is One (1) year Parts/ One Hundred

**Twenty (120) days Labor.**

The warranty period for any battery cell or assembly in ninety (90) days. Any products repaired or replaced under the term of this warranty are covered under warranty for the remainder of the original warranty period or ninety (90) days if there are less than ninety (90) days remaining in the original warranty period.

**9-4 What will Diva do if the product becomes defective in materials or workmanship during the warranty period?**

If any product covered under this warranty becomes defective in materials or workmanship during the applicable warranty period, Diva will, at its option, either repair the defect product without charge for parts and labor, or provide replacement in exchange for the defective product.

**9-5 What is not covered by this warranty?**

- ① This warranty does not extent to (i)Product which have been subjected to misuse, accident, physical damage, improper installation, abnormal operation or handling, or neglect, Inundation, fire, water or other liquid intrusion; or (ii) Products which have been repaired, altered, or modified by anyone other than an authorized service representative of Diva; or (iii) defects caused by failure of component, parts or accessories not compatible with the warranted product; or (iv) Products whose warranty/quality stickers, product serial number plates or electronic serial numbers have been removed, altered, or rendered illegible; or (v) accessory items such as, cables, antennas, heat seal, cases, etc.; or (vi) Products shipped to Diva for repair from out side the United States.
- ② Any other warranties, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, shall be limited in duration of this warranty. Some states do not

allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

**9-6 How do you get warranty service?**

If you need warranty service on defective product, it must be returned to Diva service support center with description of the product malfunction or difficulty. You may be required to substantiate warranty spatus with a proof of purchase(e.g. cash register receipt).

The address of the Diva service support center is  
6 West 33rd Street  
New York, N.Y. 10001  
Or calling (212)897-0000 for any questions.

**DIRECTPAGE**